


# Gascon Systems G8850 Alarm Panel

## Alarm Panel - LED operation


**SINGLE INPUT MODEL**  
NO ALARM SIGNAL




**TWIN INPUT MODEL**  
NO ALARM SIGNALS

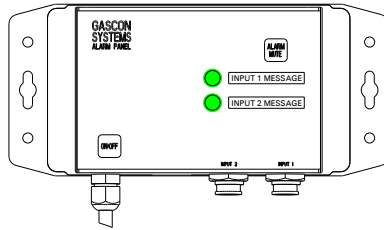


**TRIPLE INPUT MODEL**  
NO ALARM SIGNALS

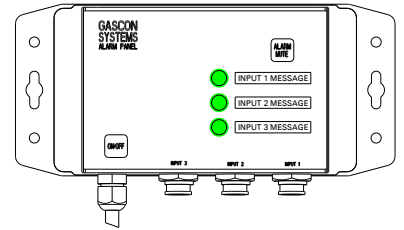


**SINGLE INPUT MODEL**  
ALARM SIGNAL  
(INDEPENDENT MODE)

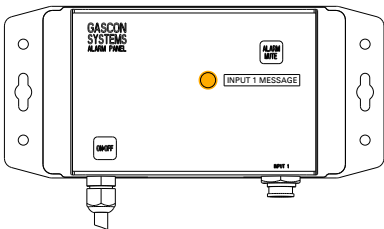


**TWIN INPUT MODEL**  
ALARM SIGNALS  
(INDEPENDENT MODE)

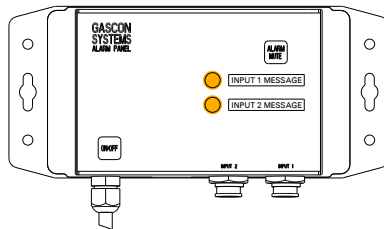


**TRIPLE INPUT MODEL**  
ALARM SIGNALS  
(INDEPENDENT MODE)

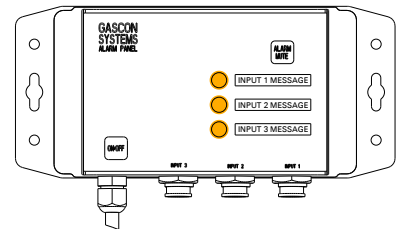



**SINGLE INPUT MODEL**  
ALARM SIGNAL  
(DEPENDENT MODE)

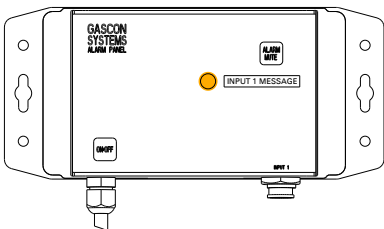

**TWIN INPUT MODEL**  
ALARM SIGNALS  
(DEPENDENT MODE)

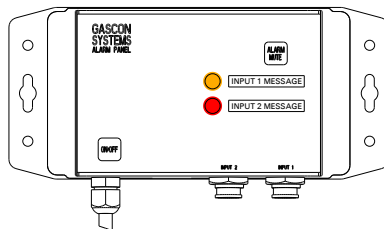

**TRIPLE INPUT MODEL**  
ALARM SIGNALS  
(DEPENDENT MODE)

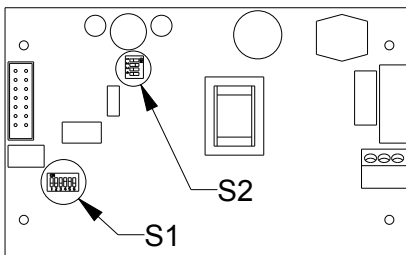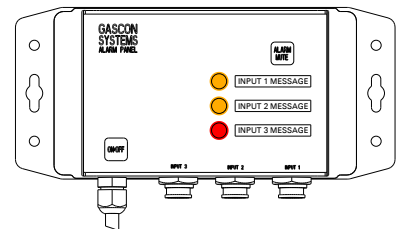


## Alarm Panel Configuration Settings (dis-connect power before adjusting settings)

### 6 way DIP switch (S1) settings (ON / OFF)


- 1 - Input 2 (Enabled / Disabled)
- 2 - Input 3 (Enabled / Disabled)
- 3 - Input 1 (Normally Closed / Normally Opened)
- 4 - Input 2 (Normally Closed / Normally Opened)
- 5 - Input 3 (Normally Closed / Normally Opened)
- 6 - Spare

### 4 way DIP switch (S2) settings (ON / OFF)

- 1 - Input Mode (Independent / Dependent)
- 2 - Output (Normally Closed / Normally Opened)
- 3 - Audible Alarm Reset (Reset after 4 hours / Never reset)
- 4 - Audible Alarm (Enabled / Disabled)

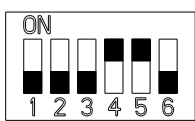

6 way DIP switch S1

 

4 way DIP switch S2

